




1. Eye Cup
2. Viewfinder Eyepiece
3. LCD Monitor
4. Menu Button
5. Playback Button
6. Wifi Lamp
7. Access Lamp
8. AF Operation Selection Button
9. ISO Speed Setting Button
10. Quick Control Button
11. Display Button
12. Aperture/Exposure Compensation/Erase
13. AE Lock/FE Lock/Reduce Button
14. Live View Shooting/Movie Shooting Button
15. Dioptic Adjustment Knob

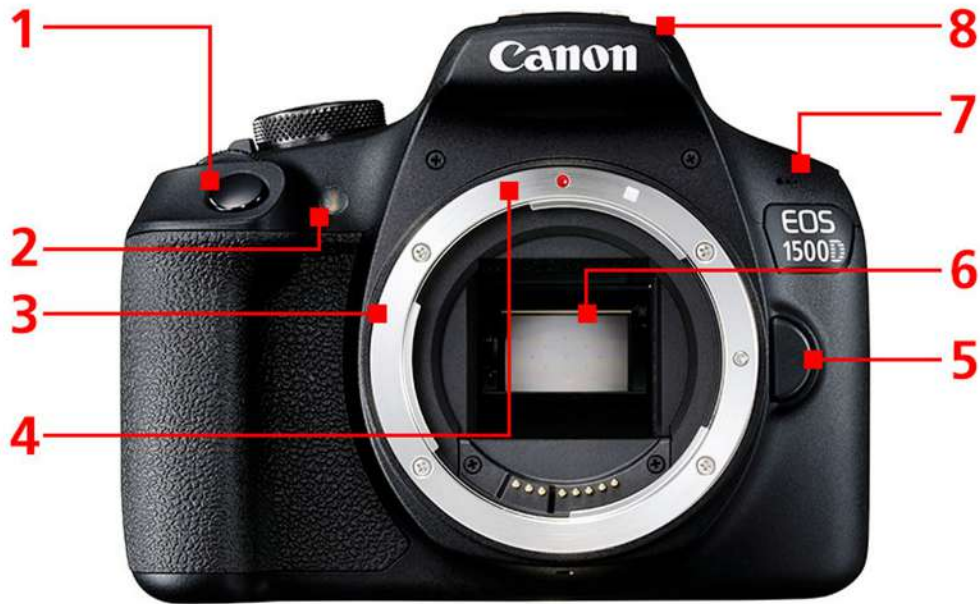

1. Shutter Button

2. Red-eye Reduction/Self-timer Lamp

3. Lens Mount

4. EF Lens Mount Index

5. Lens Release Button

6. Mirror

7. Microphone

8. Built in Flash/AF - Assist Beam Emitter



1. Image Stabalizer & Manual AF Switch
2. Speaker
3. Strap Mount
4. Hot Shoe & Built in Flash
5. Power Switch
6. Mode Dial
7. Flash Button
8. Main Dial
9. Zoom Ring
10. Focus Ring